


## Installation Instructions 2" and 3" Flat Pyramid Caps Installed on Fe<sup>26</sup> or Al<sup>13</sup> Posts


It is the responsibility of the installer to meet all code and safety requirements. The installer should determine and implement the appropriate installation techniques for each situation. The Fortress Company nor its distributors shall not be held liable for improper or unsafe installations.

Required Materials: Phillips Head Screw Driver, Eve Protection

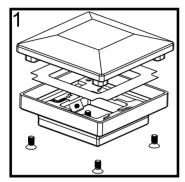


1. The following components are included with the FortressAccents 2" and 3" Flat Pyramid Caps: Post Cap, Post Cap Base, Light Slot Cover, 4 - Machine Screws, 2 - Hex Head Set Screws, and a 2.5mm Hex Wrench.

Remove the 4 Machine Screws, located at each corner. Remove the Post Cap and Light Slot Cover. **Do not discard the screws.** They will be used again.

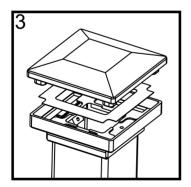


3. Place Light Slot Cover back onto Post Cap Base. Position Post Cap onto the Post Cap Base.

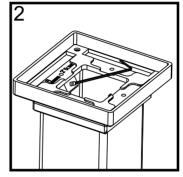

2. Place the Post Cap Base on the post. Using the supplied 2.5mm Allen Wrench tighten the two set screws. Adjust the screws to center and level the Post Cap on the post.

If installing the optional FortressAccents LED Cap Light Kit, reference those instructions before installing FortressAccents Flat Pyramid Cap.

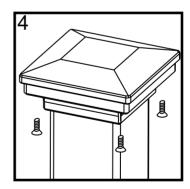

4. Secure Post Cap with the 4 Machine Screws that were removed in step 1.

Please visit www.fortressaccents.com for information on how to order additional accessories.